

**ENGLISH**

Setting the Date and the Time .....	5
Setting the Timers to Zero .....	7
Setting the Time and Correction .....	8
Timing Modes .....	9
Battery .....	18


**FRANÇAIS**

Mise à zéro des compteurs .....	22
Mise à l'heure et correction .....	23
Mode Chronométrage .....	24
Pile .....	33

**DEUTSCH**

Einstellen von Datum und Zeit .....	34
Zurückstellen der Zähler auf null .....	37
Einstellen von Zeit und Korrektur .....	38
Zeit Mess-Modus .....	39
Batterie .....	48

## HUNTER MACH 2 FLYBACK ANALOG CHRONOGRAPH

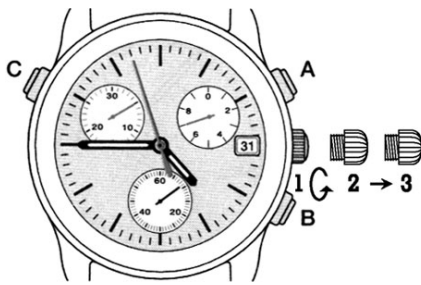

The crown has 3 positions:



1. Normal position:  
recessed
2. Extended position:  
to set the date
3. Fully extended position:  
to set the time

**NOTE:** You must always push in and screw down the crown to form a water-resistant seal with the case. Never operate the crown when the watch is wet.

4

## SETTING THE DATE AND THE TIME

  - A. Unscrew the crown by turning it toward you, then pull out crown to position 2.
- B. Turn the crown away from you until the date showing is the day before the desired setting.
- C. Pull out the crown to the fully extended position (3) and rotate toward you. When midnight is reached, the date will advance to the desired date. Continue to turn the crown until the desired time is set. Remember that the date advances at 12:00 midnight, not 12:00 noon.
- D. Push in the crown and screw down, away from you, until it is sealed tight into its normal position (1). The date and time are now set.




**TO SET TIME ALONE:** Unscrew the crown by turning it toward you to get to unscrewed position (2) and refer to instructions "C".




5


## DISPLAY-WATCH HANDS

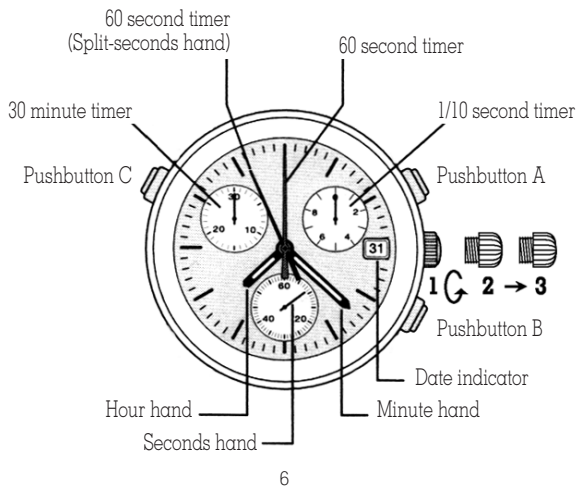

## SETTING THE TIMERS TO ZERO

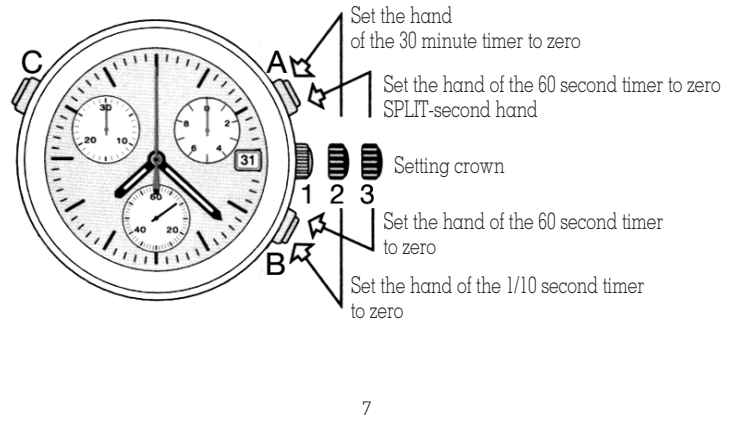


## SETTING THE TIME AND CORRECTION

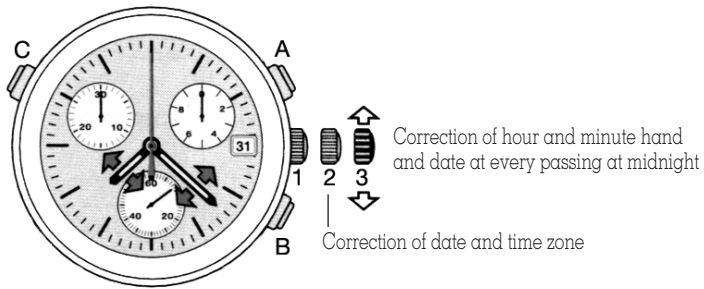

**Note:**  
Setting crown in position 3: **STOP-SECOND**

8

## TIMING MODE - Simple Timing Function

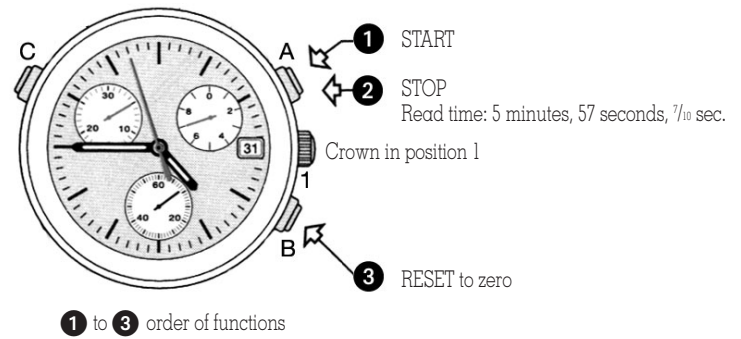


### Warning:

Before starting the time, put back the chronograph hands to their original position.  
If necessary, see paragraph **Setting the Timers to Zero** (page 7).

9


### TIMING MODE - Add Function

1 to X order of functions

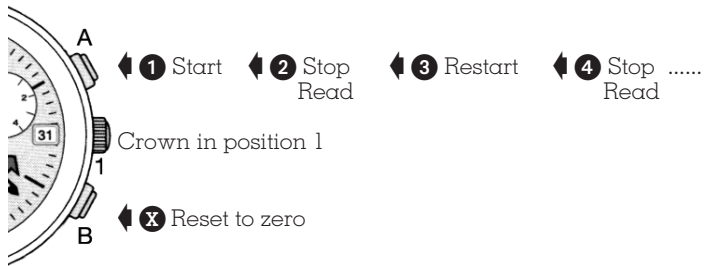

10



### TIMING MODE - Split Time

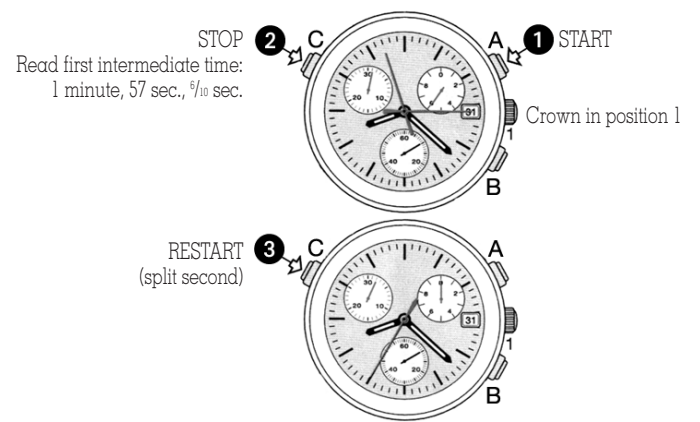

1 to 3 order of functions

11

**TIMING MODE - Split Time (cont.)**

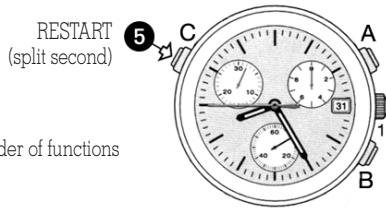
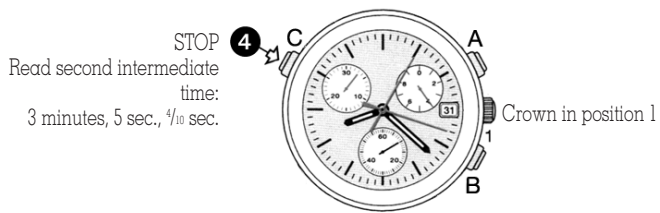


4 to 5 order of functions

**Note:**


The time captured can be 30 minutes at max. (exclusive worldwide function).

**TIMING MODE - Split Time (cont.)**

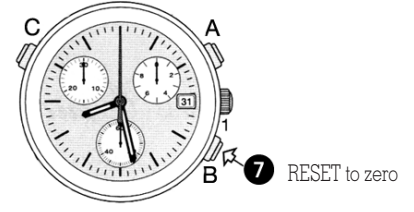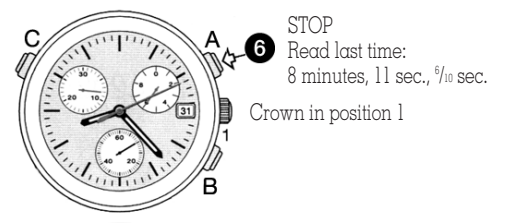


6 to 7 order of functions

**TIMING MODE - Memo Function**

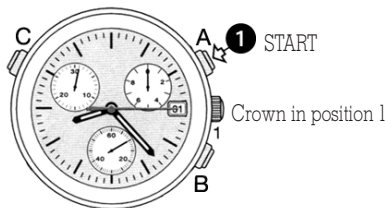


STOP  
Read first intermediate time:  
1 minute, 35 sec.,  $\frac{5}{10}$  sec.

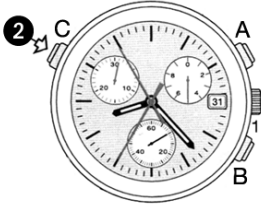


1 to X order of functions

**TIMING MODE - Memo Function (cont.)**

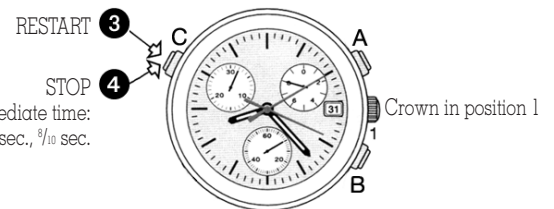

Read second intermediate time:  
2 minutes, 10 sec.,  $\frac{10}{100}$  sec.

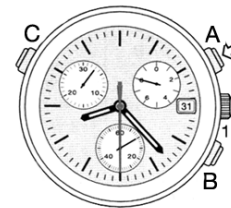

STOP  
Read last time:  
3 minutes, 30 sec.,  $\frac{30}{100}$  sec.



**TIMING MODE - Memo Function (cont.)**

Read last registered intermediate time  
(2 minutes, 10 sec.,  $\frac{9}{10}$  sec.)  
Read last measured time



8 Pushbutton C:  
Read again last registered intermediate time

9 Pushbutton C:  
Read again last measured time

... ..

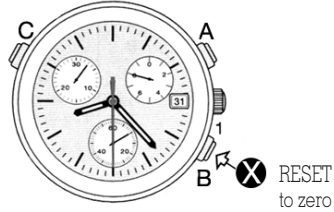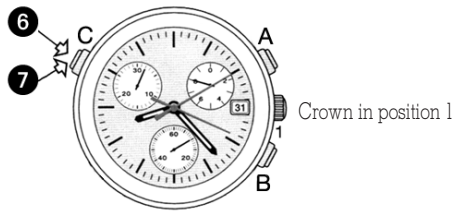

**TIMING MODE - Fly-Back Function**

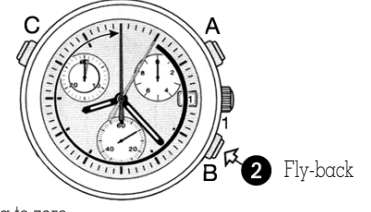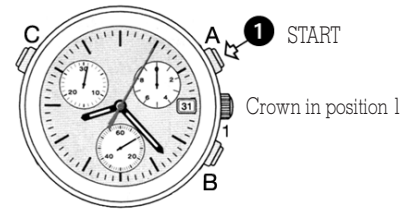

Timing restart without resetting to zero



## **BATTERY**

Your timepiece may be powered by a 1.55 volt silver oxide watch battery. **DEAD BATTERIES SHOULD BE REPLACED IMMEDIATELY.** Substituting interchangeable batteries is not recommended. Battery change should be performed by a qualified technician who should also check the condition of the gaskets and the O-ring at the same time. Battery is not covered by the warranty.