

DISPLAY

Watch Hands

DISPLAY

Digital watch indicators

Left Indicator

- Crown position I
Display of alarm On/Of
Display of alarm function AL
Display of alarm hours
Display of chrono mode CH
Display of chrono functions:
-ADD function: display Ad
-SPLT function: display SL
-LAP function: display LP
- Crown position II
Time TI
Display of hours of digital time according to the change of the time zone.
- Crown position III
Time TI
Flashing of hours of digital time
Flashing of month M

Right Indicator

- Crown position I
Display of date d
Display of AM/PM/24H of alarm
Display of alarm minutes
Display of 1/100 seconds in chrono mode
- Crown position II
Display AM/PM/24H of time
Display of minutes of digital time
- Crown position III
Display of AM/PM/24H mode
Flashing of minutes of digital time
Flashing of Day d

SETTING THE TIME

Setting crown in position III

1. Display of hours / minutes 24H (ex. 20h 58)
Press < 1 sec.

2. Choose display of hours AM/PM(ex. 11h-12h-1h...) or 24H (ex. 11h-12h-13h)
Press < 1 sec.

Setting crown in position III STOP-SECOND

Correction of hour and minute hand

Correction of digital hours

Correction of digital minutes

NOTE:
- Make sure that the analog time always corresponds to the digital time.
- To set the time more precisely, the second hand must be set at zero.

PUSHBUTTONS:
- Quick correction by pressing longer than one second.

CORRECTION OF MONTH AND DATE

Setting crown in position III

1. Selection of MONTH/DATE mode

Setting crown in position III STOP-SECOND

Correction of month

Correction of date

NOTE:
- In case of leap year, February 28 will be followed by March 1.
- Set February 28, by hand:
- Put the setting crown in the intermediate position (II) (time zone correction).
- Turn the hour hand twice counter-clockwise (2 full turns)
- Put back the setting crown in position I

SETTING THE TIMERS AT ZERO

Setting crown in position II

Set the hand of the 12 hours timer at zero

Set the hand of the 30 minutes timer at zero.

Set the hand of the 60 seconds timer at zero

NOTE:
- Quick pressure on pushbutton: put forward the hand step by step
- Long pressure (>1 sec.) on pushbutton: quickly put forward the hand.

ALARM

Set the alarm, setting crown in position I

1. Selection of ALARM function (ex. AL, Am)
Press <1 sec.

NOTE:
- The display of the ALARM function in the left aperture (AL) is automatically followed by the display of the alarm hours (left LCD aperture) and of the alarm minutes (right LCD aperture).

2. Activate the flashing of hours and minutes of the alarm for correction. Press <1 sec.

3. Correction of alarm hours

4. Correction of alarm minutes

ALARM

Set the alarm (cont.)

NOTE:
Once the hours and minutes of the alarm are set, activate or deactivate the alarm as follows:

1. Return to alarm/date mode Press < 1 sec.

2. Selection of activated or deactivated alarm, display ON/OFF Press > 1 sec.

If the alarm is active (On), a beep will confirm this function.


You can also check the alarm-bell by pressing pushbutton D for longer than 1 sec. (demo alarm mode)

NOTE:
When setting the alarm, make sure that the analog time (hands) corresponds to the digital time (right / left apertures). If it does not, please see paragraph "Setting the time".

User instructions - Odyssey Chronograph Alarm

TIMING MODE

Simple timing function

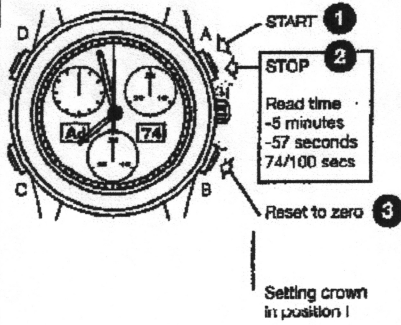


WARNING
Before taking the time, put back the chronograph hands to their original position. If necessary, see paragraph "Setting the timers at zero".

1 to 3 order of functions

TIMING MODE


ADD function

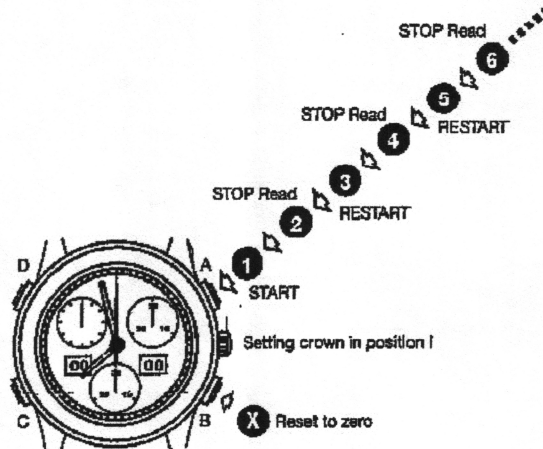

1 to X order of functions

TIMING MODE


SPLIT-TIME or INTERMEDIATE TIMES function

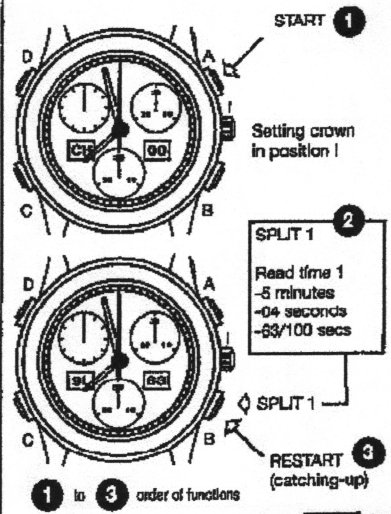

1 to 3 order of functions

TIMING MODE


SPLIT-TIME or INTERMEDIATE TIMES function (cont.)

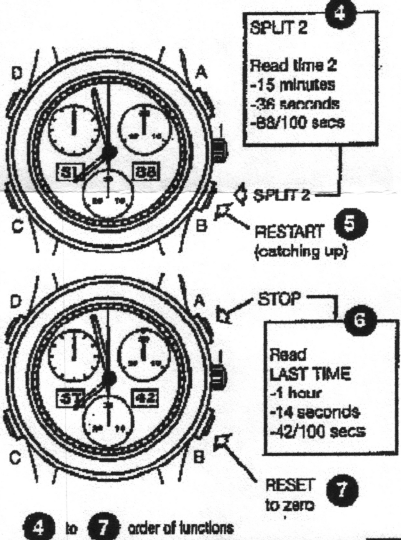

4 to 7 order of functions

TIMING MODE


LAP-TIME function

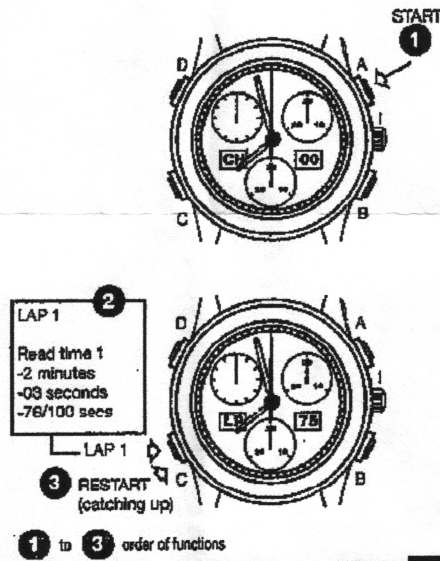

1 to 3 order of functions

TIMING MODE


LAP-TIME function (cont.)

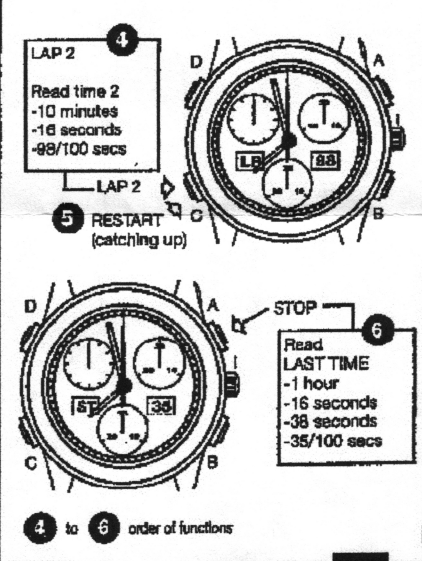

4 to 6 order of functions

TIMING MODE


LAP-TIME function (cont. and end)

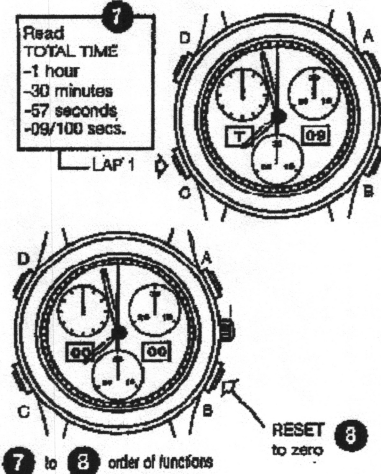

7 to 8 order of functions

CORRECTION MODE

Time zone correction
Setting crown in position II

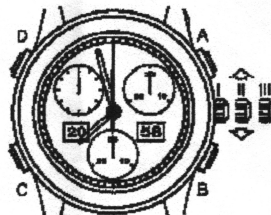


WARNING
When correcting the time zone, the hours of digital time (left indicator) will be modified as the hands are moved.

You can adjust the digital time by hand.

CORRECTION MODE

Time zone correction
(digital time)
Setting crown position II

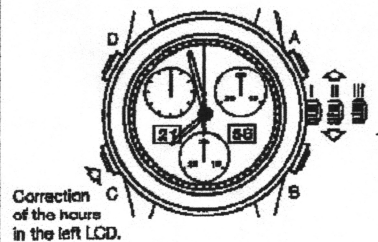

NOTE:
Quick pressure on pushbutton: slowly put forward the hours of digital time.
Long pressure (>1 sec.) on pushbutton: quickly put forward the hours of digital time.