

CONGRATULATIONS

We are proud that you have chosen this fine Victorinox Swiss Army TRAVEL ALARM 1884 LIMITED EDITION.

Inspired by the ingenuity of the Original Swiss Army Knife, this unique Travel Alarm features the same folding system invented for the Victorinox pocket knife in 1884.

We hope that you enjoy this special timepiece.

TRAVEL ALARM 1884 LIMITED EDITION

This very special model is limited to 1884 pieces worldwide in honor of the founding year of Victorinox.

To celebrate the 125th anniversary, Victorinox Swiss Army realized the old dream of combining a timepiece with the principle of the retractable blade of all Victorinox pocket knives. The resulting Travel Alarm features the same spring effect and "click" sound as the Original Swiss Army Knife, the same red side-panels and even includes the famous toothpick and tweezers. The dial and side-panels adopt the red and yellow-gold jubilee colors of Victorinox 125th anniversary. The front panel features the cross and shield logo in gold, while the back panel is stamped with Victorinox anniversary logo: "125 years, your companion for life".





FEATURES

Swiss-made quartz movement (ETA 804.192) with alarm feature.

Functions

Alarm

Hours, minutes and seconds Date calendar at 3 o'clock

Technical specifications

54 mm case made of solid stainless steel (316L) 57.50 mm with crown and pushers

Height: 19.50 mm

Protected crown and alarm pusher

Opening system with spring made by Victorinox

Shock-resistant hardened mineral crystal

Special red and vellow-gold dial

Luminescent hands and hour markers

Water resistance

Your TRAVEL ALARM 1884 LIMITED EDITION timepiece is water resistant to 30 meters (3ATM, 98ft).

HOW TO USE YOUR TIMEPIECE

Pushers


A Alarm on/off

Timepiece indications

- B Hours hand
- C Minutes hand
- D Seconds hand
- E Alarm hand
- F Date

The Crown has three positions

- 1 Normal running position
- 2 Date setting by a counter-clockwise rotation
- Alarm setting by a clockwise rotation
- 3 Setting the time, seconds stop

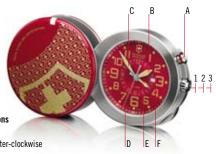



SETTING THE TIME

- 1. Pull the crown out to position 3.
- Make sure that the position of the hands corresponds to a change of date at midnight and not at noon. Turn the crown to position the hands on the desired time.
- 3. Push the crown back down firmly against the case to position 1.

SETTING THE DATE

- Pull the crown out to position 3. Turn crown clockwise to move hands. When your reach midnight, the calendar date will jump, then set the correct time.
- Set the crown in position 2. Adjust the date by turning the crown counter-clockwise. Then set the crown back to position 1.

SETTING THE ALARM

The alarm can be set to operate only within a period of 12 hours in relation to when it is set. Setting the alarm time:

- 1 Pull the crown out to position 2.
- 2 Turn crown clockwise to set the alarm time.
- 3 Push the crown back to position 1 once the desired alarm time is set.

Switching on the alarm: pull out the alarm pusher (A). The activation of the alarm is confirmed by a beep.

Switching off the alarm: push the alarm pusher (A) to neutral position.

Alarm is switched off.



We believe it is not enough to provide raw function and utility; those values alone don't satisfy the heart. It is beautiful design that brings our products to life and continues to inspire the extraordinary brand loyalty of our most passionate consumers.

Victorinox Swiss Army timepieces and Victorinox Swiss Army Knives, cutlery, travel gear, fashion and fragrance exist to perform, fulfill a need, and delight in their simple beauty.

They are born of human hands and minds for human needs.

They have a heart and intelligence. They are, made like you.